



pos.no	part.no	description	used qty	pc/set	note1	note2	barcode
1	SE00000325	SCREW PTB 3X8(NI)		5 PC.			
2	SE00000459	CIRCUIT BOARD A ASSY 05A W02		1 PC.			
3	SE00000325	SCREW PTB 3X8(NI)		6 PC.			
4	SE00000462	CIRCUIT BOARD C ASSY 07C WA3		1 PC.			
5	SE09090011	SCREW 1.7		6 PC.			
6	SE020PC020	POWER BUTTON HOLDER		1 PC.			
7	SE00000157	POWER BUTTON (GRY)		1 PC.			
8	SE09090011	SCREW 1.7		7 PC.			
9	SE020PC030	PRESET BUTTON HOLDER		1 PC.			
10	SE00000158	PRESET BUTTON (GRY)		1 PC.			
11	SE09064161	SCREW M4X16		1 PC.			
12	SE00000204	FRONT CABINET ASSY		1 PC.			
13	SE09064161	SCREW M4X16		1 PC.			
14	SE09163102	SCREW M3X10		1 PC.			
15	SE09064161	SCREW M4X16		1 PC.			
16	SE00000193	SCREW 3X10		2 PC.			
17	SE00000464	PCB-P DC JACK ASSY 07P WA1		1 PC.			
18	SE09163102	SCREW M3X10		1 PC.			
19	SE09064161	SCREW M4X16		1 PC.			
20	SE00000159	FRONT BUMPER		1 PC.			
21	SE00000160	SCREW PTHE6X47(CR)		4 PC.			
22	SE0338PC5Z	FRONT BAR		2 PC.			
23	SE00000042	JACK COVER		1 PC.			
24	SE21B1110A	ROTARY KNOB RING		1 PC.			
25	SE09173106	HEX SCREW M3X10		1 PC.			
26	SE00000465	ROTARY KNOB BLK 3102PC0000040		1 PC.			
27	SE09176166	HEX SCREW M6X16		2 PC.			
28	SE00000162	BATTERY COVER BUMPER		1 PC.			
29	SE09176166	HEX SCREW M6X16		2 PC.			
30	SE00000165	REAR BUMPER		1 PC.			
31	SE00000166	BATTERY COVER		1 PC.			
32	SE00000325	SCREW PTB 3X8(NI)		2 PC.			
33	SE00000168	PACKING		1 PC.			
34	SE0307PC5Z	BACK UP BATTERY COVER		1 PC.			
35	SE00000466	BATTERY CONTACT(+) 2100RA00700		1 PC.			
36	SE00000467	BATTERY CONTACT (-)2100PL00200		1 PC.			
37	SE021E9030	+/- BATTERY CONTACT ASS'Y		1 PC.			
38	SE00000176	SCREW PTHE6X20(CR)		1 PC.			
39	SE09176166	HEX SCREW M6X16		1 PC.			
40	SE00000177	HANDLE HOLDER(R)		1 PC.			
41	SE00000184	SPRING		2 PC.			
42	SE09994007	STEEL BALL		2 PC.			
43	SE00000179	HANDLE		1 PC.			
44	SE00000180	HANDLE HOLDER (L)		1 PC.			
45	SE00000176	SCREW PTHE6X20(CR)		1 PC.			
46	SE09176166	HEX SCREW M6X16		1 PC.			
47	SE00000184	SPRING		2 PC.			
48	SE09994007	STEEL BALL		2 PC.			
49	SE00000190	BATTERY COVER LOCKER		1 PC.			
50	SE00000191	ROD ANT (BLK)		1 PC.			
51	SE021PC050	LOCKER FIXER PIN 63.8		1 PC.			
52	SE00000067	LOCKER HINGER		1 PC.			
53	SE09163452	SCREW M3X45		1 PC.			
54	SE021PC040	LOCKER FIXER PIN 79.5		1 PC.			
55	SE021J9032	ROD ANT HOLDER		1 PC.			

56	SE024J9050	PACKING	1	PC.			
57	SE00000192	HANDLE SUS-PLATE(L)	1	PC.			
58	SE00000468	REAR CABINET(BLUE)ASSY 01R WA1	1	PC.			
59	SE00000187	HANDLE SUS-PLATE (R)	1	PC.			
60	SE09163452	SCREW M3X45	1	PC.			
61	SE021PC030	BATTERY COVER LOCKER	1	PC.			
62	SE024J9030	PACKING	1	PC.			
63	SE01620771	SPEAKER	1	PC.			
64	SE024J9070	PACKING	4	PC.			
65	SE09090023	SCREW M4X12	4	PC.			
66	SE024J9090	PACKING	4	PC.			
67	SE00000205	SPEAKER NET ASSY	1	PC.			
68	SE024J9040	PACKING	4	PC.			
69	SE9076146A	HEX SCREW M6X14	4	PC.			
70	SE9076146A	HEX SCREW M6X14	4	PC.			
71	SE024J9040	PACKING	4	PC.			
72	SE00000205	SPEAKER NET ASSY	1	PC.			
73	SE024J9090	PACKING	4	PC.			
74	SE01620771	SPEAKER	1	PC.			
75	SE09090023	SCREW M4X12	4	PC.			
76	SE024J9070	PACKING	4	PC.			
77	SE024J9030	PACKING	1	PC.			
78	SE00000193	SCREW 3X10	2	PC.			
79	SE00000470	PCB F AUX-2 ASS'Y 07FY301	1	PC.			
80	SE021PC100	ROD ANT TERMINAL	1	PC.			
81	SE021P0020	NUT	1	PC.			
82	SE00000199	SILICON RUBBER WASHER	2	PC.			
83	SE00000193	SCREW 3X10	2	PC.			
84	SE00000199	SILICON RUBBER WASHER	2	PC.			
85	SE00000193	SCREW 3X10	1	PC.			
86	SE021J9010	SPEAKER HOLDER	1	PC.			
87	SE023PC020	EVA 25X18X5.5	1	PC.			
88	SE023PC020	EVA 25X18X5.5	1	PC.			
89	SE021J9010	SPEAKER HOLDER	1	PC.			
90	SE00000416	TERMINAL E (B)	1	PC.			
91	SE00000325	SCREW PTB 3X8(NI)	2	PC.			
92	SE00000200	TERMINAL C	1	PC.			
93	SE00000325	SCREW PTB 3X8(NI)	2	PC.			
94	SE00000430	SWITCH KNOB	1	PC.			
95	SE00000472	PCB BATTERY SWITCH ASSY07E WA1	1	PC.			
96	SE00000325	SCREW PTB 3X8(NI)	2	PC.			
97	SE00000473	TERMINAL 10.8V ASSY 011 WA1	1	PC.			
98	SE00000325	SCREW PTB 3X8(NI)	2	PC.			
99	SE00000195	W/TIES 100MM	1	PC.			
100	SE024PC040	PACKING	1	PC.			
A01	SE00000078	AC ADAPTER 3A8D127102B11	1	PC.			088381 44782 9